



# Creative Zen Vision M Screen Replacement

If your screen is flickering, blacked out, or cracked, this guide will assist you.

Written By: Kirstie G



## INTRODUCTION


This guide demonstrates how to replace a screen. You will need a one mm Phillips head screwdriver. Keep in mind that the Creative Zen Vision was released in 2005 and discontinued shortly after that. So it may be difficult to obtain a new screen to use as a replacement.

## Step 1 — Screen



- Disconnect the wire from the bottom device.
- Handle with care as the wires tend to disconnect easily.


## Step 2

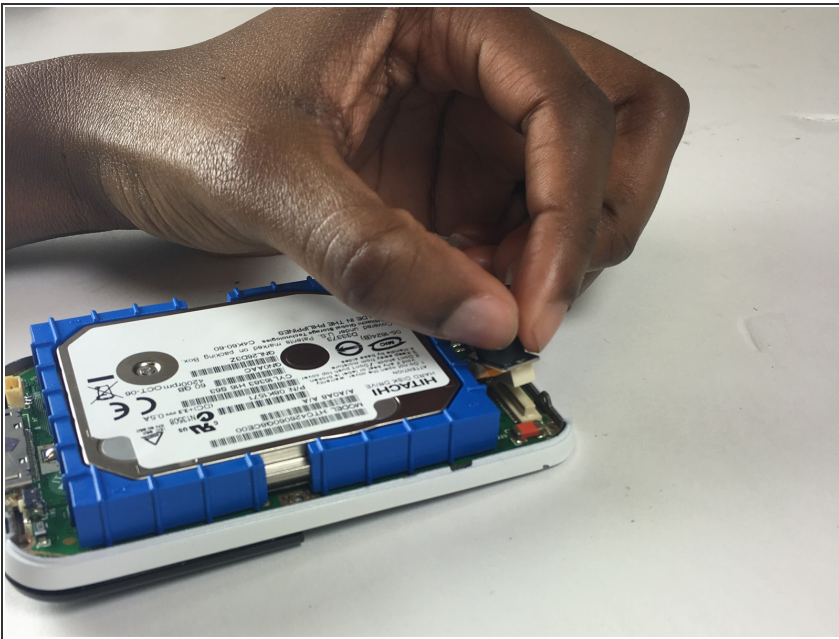

- Disconnect the hard drive.
- In the top right corner, pull the black foam square off to separate the hard drive from the screen.
- Handle with care as the hard drive also comes off easily.






## Step 3

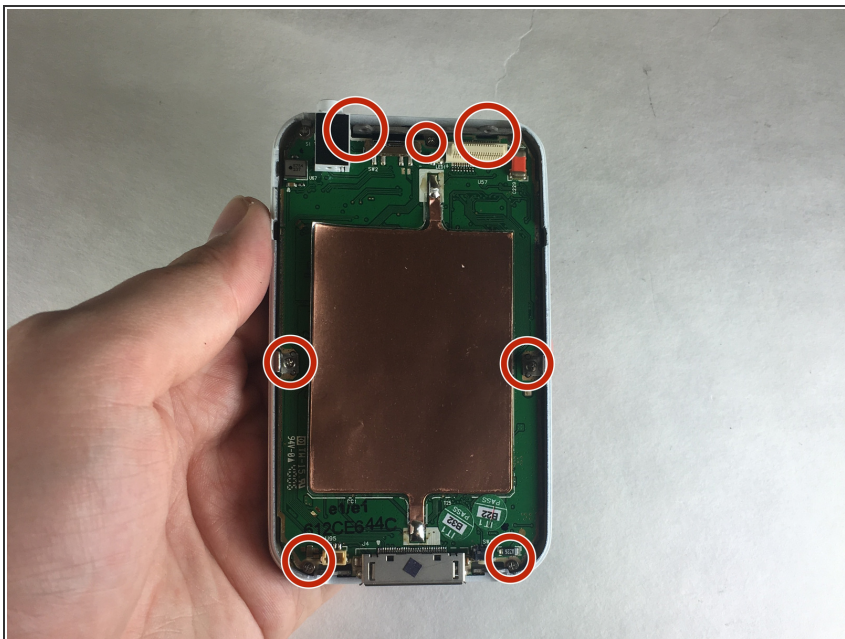

- Unscrew the seven screws placed around the mother board.
- You will need a one millimeter Phillips head screwdriver.
- The screws are small, so keep them safely.

## Step 4

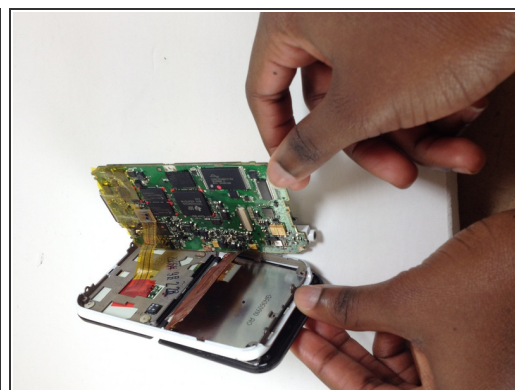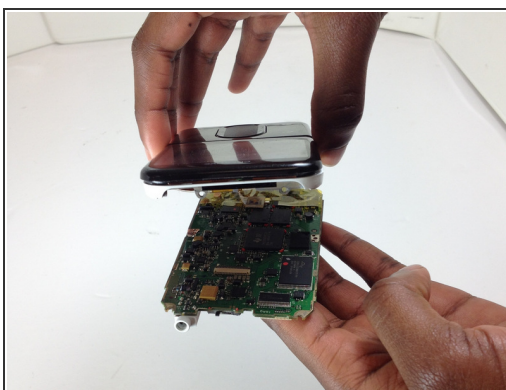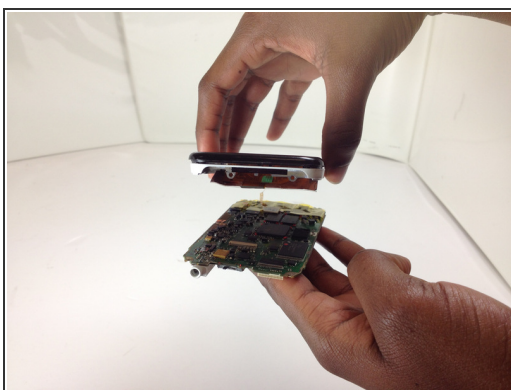

- Flip your device upside down so that the motherboard will loosen.
- Detach the connector from the motherboard.

## Step 5



- Tilt the screen diagonally. Separate the screen and motherboard from the device frame.
- Lift the light gray flap to detach the screen from the motherboard.

## Step 6



- Separate the clear screen frame from the digital display.

To reassemble your device, follow these instructions in reverse order.

